

Panasonic Information

KXT 206	
Setting the Time	
Go to Extension 21	
Pick up Handset	Dial 77
	Enter Hour [01 to 12]
	Enter Minute [00 to 59]
	Press 0 for AM or 1 for PM
	Press # to end
Replace Handset	
Setting the Date	
Go to Extension 21	
Pick up Handset	Dial 76
	Enter year [eg 01]
	Enter Month [eg 03]
	Enter Day [eg 11]
	Enter Day of Week [Sun = 1, Mon =2 etc]
	Press # to end
Replace Handset	

KXTA 624	
Setting Date & Time	
Go to Operator extension [usually 21, 201]	
Ensure it is on hook	
Turn the Programme/Set switch at the top & back of the telephone to PROGRAM	Press 0
	Enter year [eg 01]
	Enter Month [eg 03]
	Enter Day [eg 11]
	Enter Day of Week [Sun = 1, Mon =2 etc]
	Enter Hour [01 to 12]
	Enter Minute [00 to 59]
	Press 0 for AM or 1 for PM
Press Auto Dial/Store button	
Return the Programme/Set switch at the top & back of the telephone to SET	

KXT 308 & 616	
Setting the Time	
Go to Operator extension [21]	
Pick up Handset	Dial 77
	Enter Hour [01 to 12]
	Enter Minute [00 to 59]
	Press 0 for AM or 1 for PM
	Press # to end
Replace Handset	

KXT 1232	
Setting Date & Time	
Go to Operator extension [usually 21, 201]	
Ensure it is on hook	
Turn the Programme/Set switch at the top & back of the telephone to PROGRAM	Press 0
	Enter year [eg 01]
	Enter Month [eg 03]
	Enter Day [eg 11]
	Enter Day of Week [Sun = 1, Mon =2 etc]
	Enter Hour [01 to 12]
	Enter Minute [00 to 59]
	Press 0 for AM or 1 for PM
	Press Auto Memory button
Return the Programme/Set switch at the top & back of the telephone to SET	

KXTD 208

Setting the Time & Date

Go to extn 21 or 22	
	Press 5#
	enter pass [1234]
	Dial 000
	Enter date in this format DDMMYY DD = day [01-31] MM = month [01-12] YY = year [00-99]
	Enter day of week 0 = sun 1 = mon 2 = tue 3 = wed 4 = thur 5 = fri 6 = sat
	Enter time in this format HH = hour in 24 hour format [00-23] MM = minutes [00-59]
	Dial ##

KXTD 816 1232 2464**Setting Date & Time**

Go to Operator extension [usually 201: if in doubt dial 0 to identify]	
Ensure it is on hook	
Press PROGRAM	
Press ** 1234	<i>display shows USR-PGM NO?</i>
Press 000	<i>display shows Day/Time Set</i>
Press NEXT [or SP-Phone]	<i>display flashes date [eg 25]</i>
Dial in new date [eg 26]	
Press > [or FWD/DND]	<i>display flashes month [eg Mar]</i>
Press SEL+ [or AUTO ANSWER] until the correct month appears	
Press > [or FWD/DND]	<i>display flashes year [eg 01]</i>
Enter Correct Year [eg 02]	
Press > [or FWD/DND]	<i>display flashes day [eg MON]</i>
Press SEL+ [or AUTO ANSWER] until the correct day appears	
Press AUTO DIAL STORE	
Press NEXT [or SP-Phone]	<i>display flashes hour [eg 11]</i>
Enter Correct Hour [eg 12]	
Press > [or FWD/DND]	<i>display flashes minutes [eg 27]</i>
Enter Correct Minutes [eg 28]	
Press > [or FWD/DND]	<i>display flashes AM [or PM]</i>
Press SEL+ [or AUTO ANSWER] until the correct AM/PM appears	
Press AUTO DIAL STORE	
Press HOLD	<i>display shows USR-PGM NO?</i>
Press PROGRAM	
finished	

S-ICX

Setting the Time & Date

Go to a display terminal with permission to carry out this task [usually operator / 100]	Press on/off key
	Press Prog key
	Press ** Conf [<i>81 is displayed</i>]
	Dial 000
	Press Hold key [<i>0:YYMMDD is displayed</i>]
	Enter date in this format YYMMDD YY = year [00-99] MM = month [01-12] DD = day [01-31] Press Hold key [<i>HHMM is displayed</i>]
	Enter time in this format HH = hour in 24 hour format [00-23] MM = minutes [00-59] Press Hold key
	Enter day of week 0 = sun 1 = mon 2 = tue 3 = wed 4 = thur 5 = fri 6 = sat Press Hold key
	Press Prog key
	Press on/off key